


## GB AWO 3751

## PROGRAMME CHART

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

- A. "Water Tap Closed" indication
- B. "Clean Pump" indication
- C. "Door Locked" indication

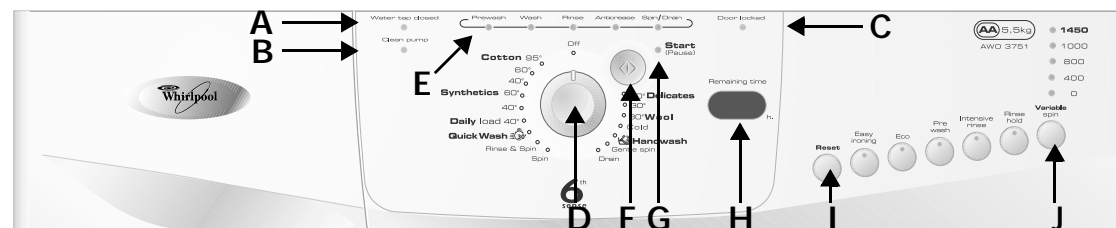

**6<sup>th</sup> sense**

6<sup>th</sup> Sense intelligent technology always guarantees perfect results with maximum efficiency whatever the wash load.

- D. Programme selector knob
- E. Programme sequence indication
- F. "Start/Pause" button
- G. "Start/Pause" button
- H. "Remaining Time" display
- I. "Reset" button
- J. "Spin Speed" button

Selecting any option the indication lights up. When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

Programme	Care Labels	Type of wash/Notes	Max Load Kg	Detergents and additives			Special options						Max Spin Speed rpm
				Softener	Main Wash	Pre-wash	Easy Ironing	Eco	Prewash	Intensive Rinse	Rinse Hold	Variable Spin	
<b>Cotton</b> 95°, 60°, 40°		Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton, coloured cotton and linen. For temperature selection, please respect the manufacturer's recommendation on the care label. <i>With heavily soiled laundry the additional "Prewash" option can be selected as well.</i>	5.5	*	Yes	*	*	*	*	*	*	*	1450
<b>Synthetics</b> 60°, 40°		Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	*	Yes	*	*	*	*	*	*	* <sup>1)</sup>	1000 <sup>1)</sup>
<b>Daily load</b> 40°		Slightly to normally soiled textiles made of cotton and/or synthetics.	3.0	*	Yes	—	*	—	—	*	*	*	1450
<b>Quick Wash</b>		Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	3.0	*	Yes	—	*	—	—	*	*	*	1450
<b>Delicates</b> 40°, 30°		Curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	*	Yes	*	—	—	*	—	*	* <sup>1)</sup>	1000 <sup>1)</sup>
<b>Wool</b> 30°, Cold		Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	1.0	*	Yes	—	—	—	—	—	*	* <sup>1)</sup>	1000 <sup>1)</sup>
<b>Handwash</b>		Textiles made of linen, silk, wool and viscose marked as "handwashable". <i>If you select "Rinse Hold" do not leave items to soak for too long. A very gentle spin is used in this programme.</i>	1.0	*	Yes	—	—	—	—	—	*	* <sup>2)</sup>	400 <sup>2)</sup>
<b>Rinse &amp; Spin</b>	—	Same as the last rinse and the final spin in the "Cotton" programme.	5.5	*	—	—	*	—	—	*	*	*	1450
<b>Spin</b>	—	In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.	5.5	—	—	—	—	—	—	—	—	*	1450
<b>Gentle spin</b>	—	In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.	1.5	—	—	—	—	—	—	—	—	* <sup>1)</sup>	1000 <sup>1)</sup>
<b>Drain</b>	—	Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".	—	—	—	—	—	—	—	—	—	—	—

\*: optional / Yes : dosing required  
<sup>1)</sup> For improved garment care spin speed is restricted to 1000 rpm in this programme.  
<sup>2)</sup> In this programme default spin speed can be increased till 400 rpm.



## CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)*
Cotton	95	5.5	54**	1.90	2:00
Cotton	60	5.5	49	1.04	2:20
Cotton	40	5.0	44	0.60	2:05
Synthetics	60	2.5	55	0.80	1:30
Synthetics	40	2.5	55	0.60	1:20
Daily	40	3.0	45	0.50	1:00
Quick wash	30	3.0	37	0.40	0:30
Delicates	40	1.5	60	0.60	0:45
Wool	30	1.0	60	0.30	0:40
Handwash	30	1.0	45	0.30	0:40

Prewash cycle might increase programme duration. Consumption values were measured in normalized conditions in compliance with Standard IEC 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

\* The remaining time indicator can similarly deviate from the values in the table, because it takes into account the household conditions applicable at that time.

\*\* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

## ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergent as described in the programme table or in the chapter "Detergents and Additives" in the booklet.

1. Turn the **programme selector knob** to the desired programme and temperature.
2. The remaining time display shows the duration of the chosen programme (in hours and minutes) and after taking some seconds for calculating, the indication of the **"Start/Pause"** button is flashing.
3. The programme sequence and the predefined spin speed indication corresponding to the selected programme lights up.

## SELECT ANY DESIRED OPTION

Selecting any option the indication lights up. When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

### "Easy Ironing" button

- Can be used together with "Cotton", "Synthetics" and "Daily" programmes to make ironing easier.
- Increases the water quantity and the clothes are spun very soft.

### "Eco" button

- The duration of the wash is extended and the temperature reduced to save up to 40% of energy but maintaining good washing results.

### "Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. The cycle time increases approximately 15 min.

### "Intensive Rinse" button

- More water and a longer time in rinse cycle is added.
- This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies.

### "Rinse Hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.

- This option is particularly recommended for the programme "Synthetics", "Daily" and "Delicates".

- This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

**Note:** The programme stops to "Rinse Hold" at the time the "Rinse Hold" light in the programme sequence indication is on.

### Terminate the "Rinse Hold" option:

- Press the "Rinse Hold" button again; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector knob counterclockwise to the "Drain" programme and press the **"Start/Pause"** button again when the indication next to it is flashing.

### "Spin Speed" button

- Every programme has an automatic predefined maximum spin speed.
- Press the button to set another spin speed.
- If the spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.

## PROGRAMME START

Open the tap and press the **"Start/Pause"** button. The indication next to the **"Start/Pause"** button lights up. The indications show the sequence reached in the programme. After starting the programme, the sequence indication runs from left to right through Wash, Rinse, Spin.

When the sequence of the programme is finished the corresponding indication goes out.

## RED INDICATIONS

### "Water Tap Closed"

The appliance has no or insufficient water supply. Open the water tap; if the indication still lights up, refer to the "Troubleshooting Guide" in the Instructions for Use.

### "Clean Pump"

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned; in the latter case refer to the Instructions for Use ("Removing the Filter").

### "Door Locked"

As long as a washing programme is running, the lamp lights up to show that the door cannot be opened. When the indication goes off, the door can be opened again.

## PROGRAMME END

- The remaining time is on "0:00" and all the lights of the programme sequence indication are off.
1. Turn the programme selector to the "Off/0" position.
  2. Close the water tap.
  3. Open the door and unload the machine.
  4. Leave the door ajar to allow the drum to dry out.

## CHANGE THE PROGRAMME, OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button to pause the programme. The light flashes.
2. Select the new programme (with temperature), any options and another spin speed if you want.
3. Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

## CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

The **"Reset"** button cancels a programme before the end.

- Press the **"Reset"** button for at least 3 seconds. Any existing water is drained out before the door can be opened.



## HOT / COLD FILL INSTRUCTION

### If you wish to connect hot and cold water supply (Fig.1):

1. Fix the red marked inlet hose at the hot water tap and at the inlet valve with the red filter on the rear side of machine.
2. Fix the other inlet hose at the cold water tap and at the inlet valve with the blue filter on the rear side of the machine.

#### Make sure:

- a) The connections are tightly fixed
- b) Do not invert their position (for example: cold fill into hot inlet valve and viceversa).

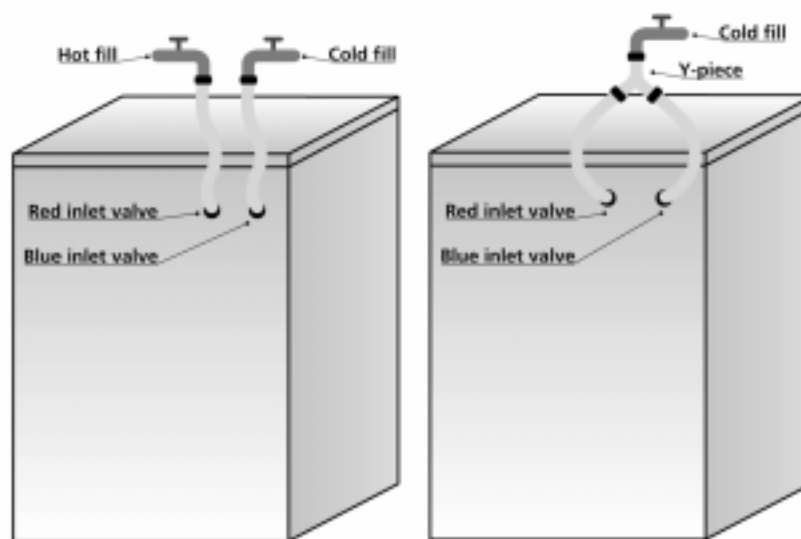


Fig.1

Fig.2

### If you wish to connect only the cold fill follow the below instruction (Fig.2):

1. You need a Y-piece connector. The Y-piece connector can be ordered via our Service Organization or purchased in a specialized hydraulic component store.
2. Fix the Y-piece connector to the cold fill tap.
3. Connect the two inlet valves present on the rear part of the machine to the Y-piece connector using the relative provider hoses.

#### Make sure:

All connections are tightly fixed.

**Do not allow children to operate, crawl on, near or inside your washer.**

**Note that during wash cycles, the surface temperature of the porthole door may increase.**

**Close supervision of children is necessary when the appliance is used near children.**